













PRODUCT DESCRIPTION

With a sleek and thinner diameter, our new EZ Stand frames are a great alternative to our premium back wall displays. Quickly assembled in just minutes, slide the tubes together and lock them in place with a push button snap to assemble the frame. Then, simply pull the pillowcaselike graphic over the frame and zip it shut. The bottom zipper - hidden from view, tightens the stretch fabric beautifully displaying your graphic from edge to edge. Available in various widths and heights there is an EZ Stand for almost any occasion. Add an option Silver Bag to store your stand and graphic in between events or LED lights to highlight your message.

DISPLAY DIMENSIONS	25.5"W x 90"H x 17.6"D
GRAPHIC SIZE	24"W x 90"H

GRAPHIC MATERIAL

Dye Sublimated Stretch Fabric

Pillowcase finishing with #10 zipper across the bottom

DISPLAY CONSTRUCTION

30mm Silver anodized aluminum tube frame

SHIPPING WEIGHTS & DIMENSIONS	
Shipping Weight	5 lbs (Hardware Only) 7 lbs (Graphic Package) 2 lb (Graphic Only)
Shipping Dimensions	31"L x 11"W x 4"H (Hardware Only) 31"L x 11"W x 4"H (Graphic Package) Poly Bag (Graphic Only)

AVAILABLE ACCESSORIES

EZ Tube LED Light Silver	EZ Tube LED Light Black
Silver Bag 24"	



Tool Free Flat Feet (1.9in W x 17.6in L x 6mm H)



Optional Silver Bag SKU: SBAG24



SKU: EZT-LEDSLV



Optional LED Light Silver Optional LED Light Black SKU: EZT-LEDBLK









HARDWARE ONLY PARTS LIST




Qty.1 - 24" Top Tubing




Qty.4 - 24" Vertical Tubing



Qty.2 - 12" Vertical Tubing

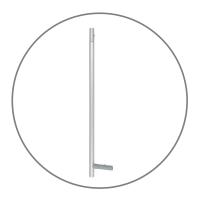

Qty.2 - 20" Vertical Tubing

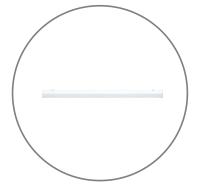

Qty. 1 - Bottom Tubing



Qty.2 - Tool Free Feet














SET UP INSTRUCTIONS

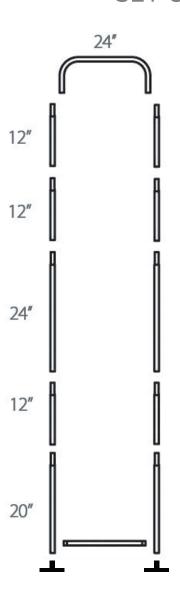

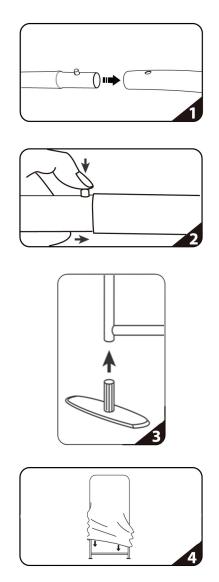



- 2. Insert reduced end into receiving tube and making sure to push spring button down
- 3. Once the tube is fully inserted the spring button will pop through hole of receiving tube. The tubes may need to be rotated for spring button to line up with hole in receiving tube.
- 4. Once frame is fully assembled attach both feet using the same process as steps 1-3
- 5. Lastly pull pillowcase graphic over frame and zip it closed underneath the bottom cross bar to complete frame and graphic set up.













TEMPLATE